

1, 2, 3 **VOTE** !

TOUCHSCREEN VOTING WITH THE iVOTRONIC

1

Activate Ballot

 
A poll worker will activate your electronic ballot by inserting the Personal Electronic Ballot into the appropriate slot.



2

Make Selections

To make your selections, touch the box next to the name. To de-select, touch the box again. The iVotronic will not allow you to vote for more people than may be elected to any one office.

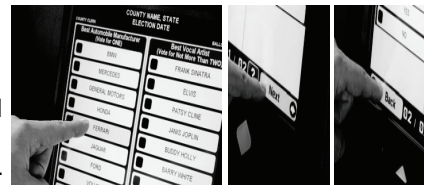

Write-In Candidates

To cast a vote for a write-in candidate, touch the "Write-In" option, and a keyboard will appear on the screen. Type in the name of a candidate and press "Accept." Your selection will appear on the screen.



Real-time Audit Log

 
To verify selections in writing, watch the voter verifiable paper audit trail, or Real-Time Audit Log, on the left-hand side of the voting booth.



3


Review Ballot

After completing the last ballot page, touch "Review" and carefully review the selection review screen. To change or make a new choice, touch the box next to the candidate's name or issue, and then touch the box of your new selection.

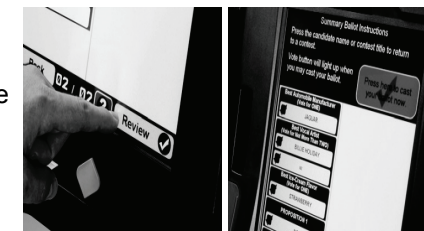

VOTE !

 When finished, press the flashing red "Vote" button to cast your ballot. The "Thank You For Voting" screen means you have properly cast your ballot.

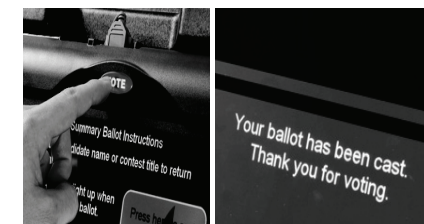

COUNTIES USING iVotronic FOR ELECTION DAY VOTING EQUIPMENT

Alamance, Alleghany, Brunswick, Burke, Caswell, Cherokee, Davidson, Davie, Guilford, Haywood, Henderson, Jackson, Lenoir, Madison, Mecklenburg, Pamlico, Pender, Perquimans, Polk, Rutherford, Surry, Transylvania, Warren and Wilson